



# CONFERENCE

“Stop spending, start saving on conferencing”

## Benefits

### New 19 inch rack mount enclosure

Simple plug and play installation

### Built-in web server

View status and configure with your browser

### View names of attendees

Grouped by conference room

### Moderator Control of

Drop, mute, and unmute

### Moderator Views voice activity and mute status

with Auto-Refresh

### View log

All conference room activity through your browser

## Forum's *Confer SE* Compact System

Provides an Affordable,

Feature Rich

Conference

Bridge.



## Value for your business, Return on your investment!

*Confer SE* provides a streamlined package for reliable, affordable, “meet-me” conferencing technology.

Organizations of all types and sizes can enjoy the benefit of incorporating audio conferencing into their communications processes. *Confer SE* delivers the easiest and most cost effective way to communicate and collaborate among employees, customers, suppliers and partners, faculty and students, doctors and patients.

- Fully Featured and Easy to Set-up
- Flexible to adapt to your needs; Affordable and Secure

## Easy Installation

Affordable, adaptable and easy to use, installation is plug and play using analog ports (Amphenol connector or T1 interface is optional).

- Network Crossover Cable is supplied for initial setup.
- Utilize straight through cable for network connection and operation.
- Administrator, Moderator and User Monitor Screens

## Security and Control

Having a **Confer SE** on-site at your premises puts **you** in control of your conferences. **Restrict access** to conferences with programmable conference room entry codes

- Change codes before each new conference starts
- Up to 15 digits long
- Keep unwanted callers out of your conferences
- Secure PIN control to identify attendees



# CONFER SE

## Chassis Dimensions

- Rack 2U
- Width 19 inches
- Depth 12 inches
- Power 115

## Chassis Environment

- Operating Temp 5°C to 50°C
- Relative Humidity 10% to 80%, non-condensing

## Network Interface

- 2 Wire loop-start/ground-start lines
- RJ-11 Jacks
- 50 –pin Amphenol

## Other connections

- LAN Connection

## Power Requirements

- 115/220 VAC 50 – 60 Hz
- 130 Watts maximum
- 25 Watts nominal

## Additional Confer SE features

### Features

- Dynamic port allocation
- No need to program your PBX into “hunt” groups for separate conferences
- Up to 8 dynamic conference “rooms”
- User enter conference room # and an optional pin

### Administrator Page Features

- Conference room status
- Configuration Page

### Moderator Page View Features

- Number of Participants in each conference
- Entry Code for each conference
- Number of available ports and total capacity
- Automatically refreshes every 8 seconds

### Security

- Authorization Code
- Web base

## Line Interfaces

### Analog 2 – wire Port (FXO)

- PBX
- Central Office
- T1 Channel Bank analog 2 wire lines

### Analog 2 – wire Disconnect Supervision

- Loop current loss
- Dial tone
- Reorder tone(fast busy)
- DTMF A/D tone

### Compliance

- FCC Part 15, (Class A), Part 68
- UL / CSA Certification

### Leading edge technology built on a proven platform

- Web browser setup
- Web browser control

### System Capacity

- 8, 16 and 24 port configuration
- T1 Connectivity (optional)

## Reporting:



## Flexible and Secure Moderator Control:

Bridge Lead Number: 972 680 0700 Total Capacity: 16 ports  
 Bridge Time: 15:18:53 Date: 05/19/2005

### Confer SE Conference Room Status

Room #	HeadCount	Attendee Names
1	6	Hemanth Dean Dennis Judith Raj Walter
2	4	Neal Chen Helen Rebeka
3	0	
4	0	
5	0	
6	0	
7	0	
8	0	
Ports Avail	6	

Moderator Control Page

### Confer III Flex Moderator Conference Room Control

Room #	HeadCount	Entry Code	Attendees
1	6	001	Hemanth Dean Dennis Judith Raj Walter
2	4	002	Neal Chen Helen Rebeka
3	0	003	
4	0	004	
5	0	005	
6	0	006	
7	0	007	
8	0	008	
Ports Avail	6		

TERMINATE CONFERENCE  
 Enter Conference Room Number (1-8)  Terminate

DROP ATTENDEE  
 Enter Attendee Name as shown in Attendee List  Drop

MUTE ATTENDEE  
 Enter Attendee Name to MUTE as shown in Attendee List  Mute

UNMUTE ATTENDEE  
 Enter Attendee Name to UN-MUTE as shown in Attendee List  UnMute

REFRESH STATUS

File Path: Moderator Status Page

